


TANGENT

342RND Dining Table
342REC Dining Table
342SQR Dining Table
352 Dining Table

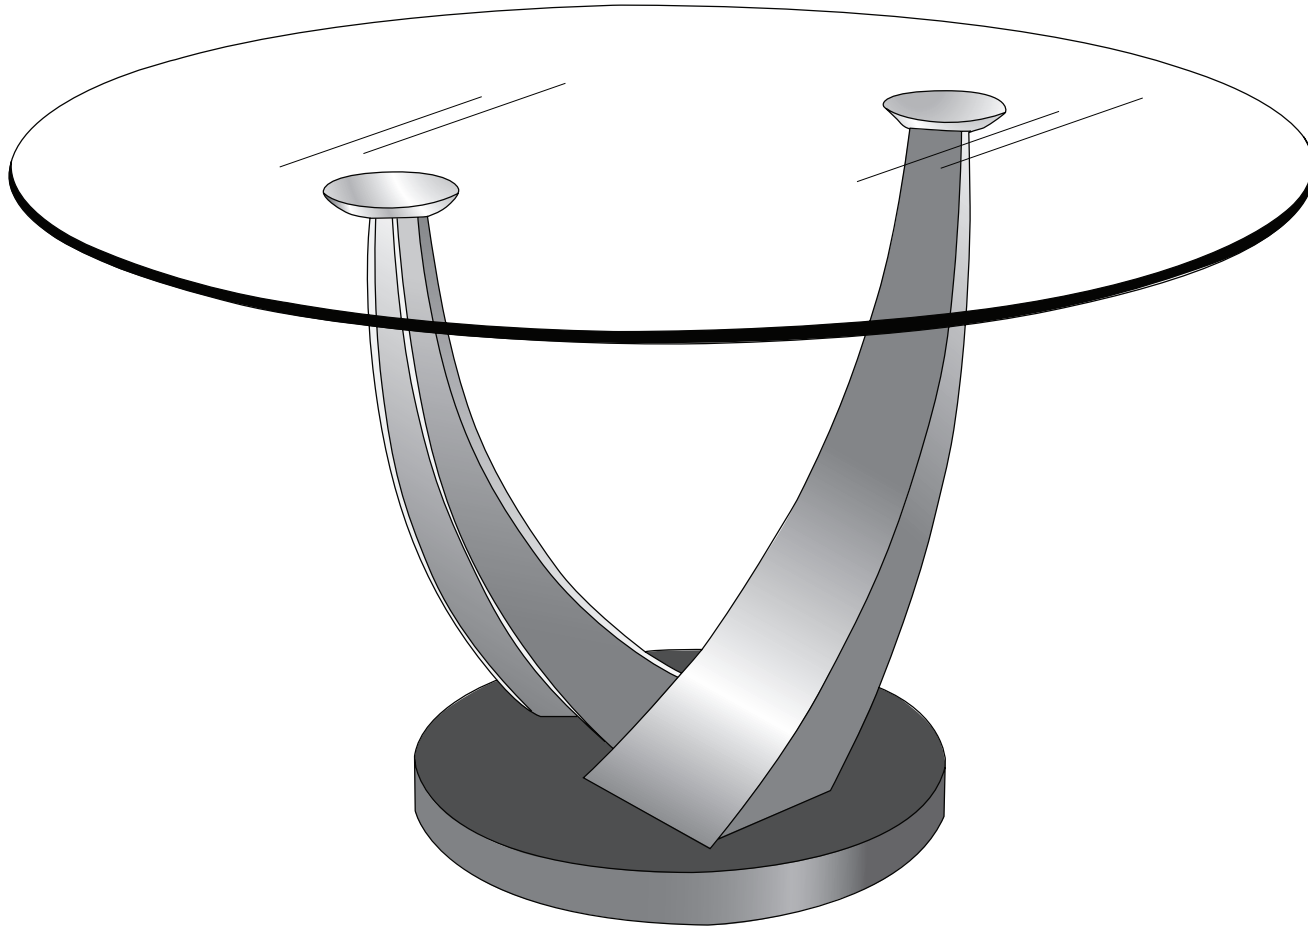

Hardware



x4

Button Head Screw




x4

Lock Washer



x4

Washer




x2

Set Screw




x1

Allen Wrench



x2

Rubber Spacer

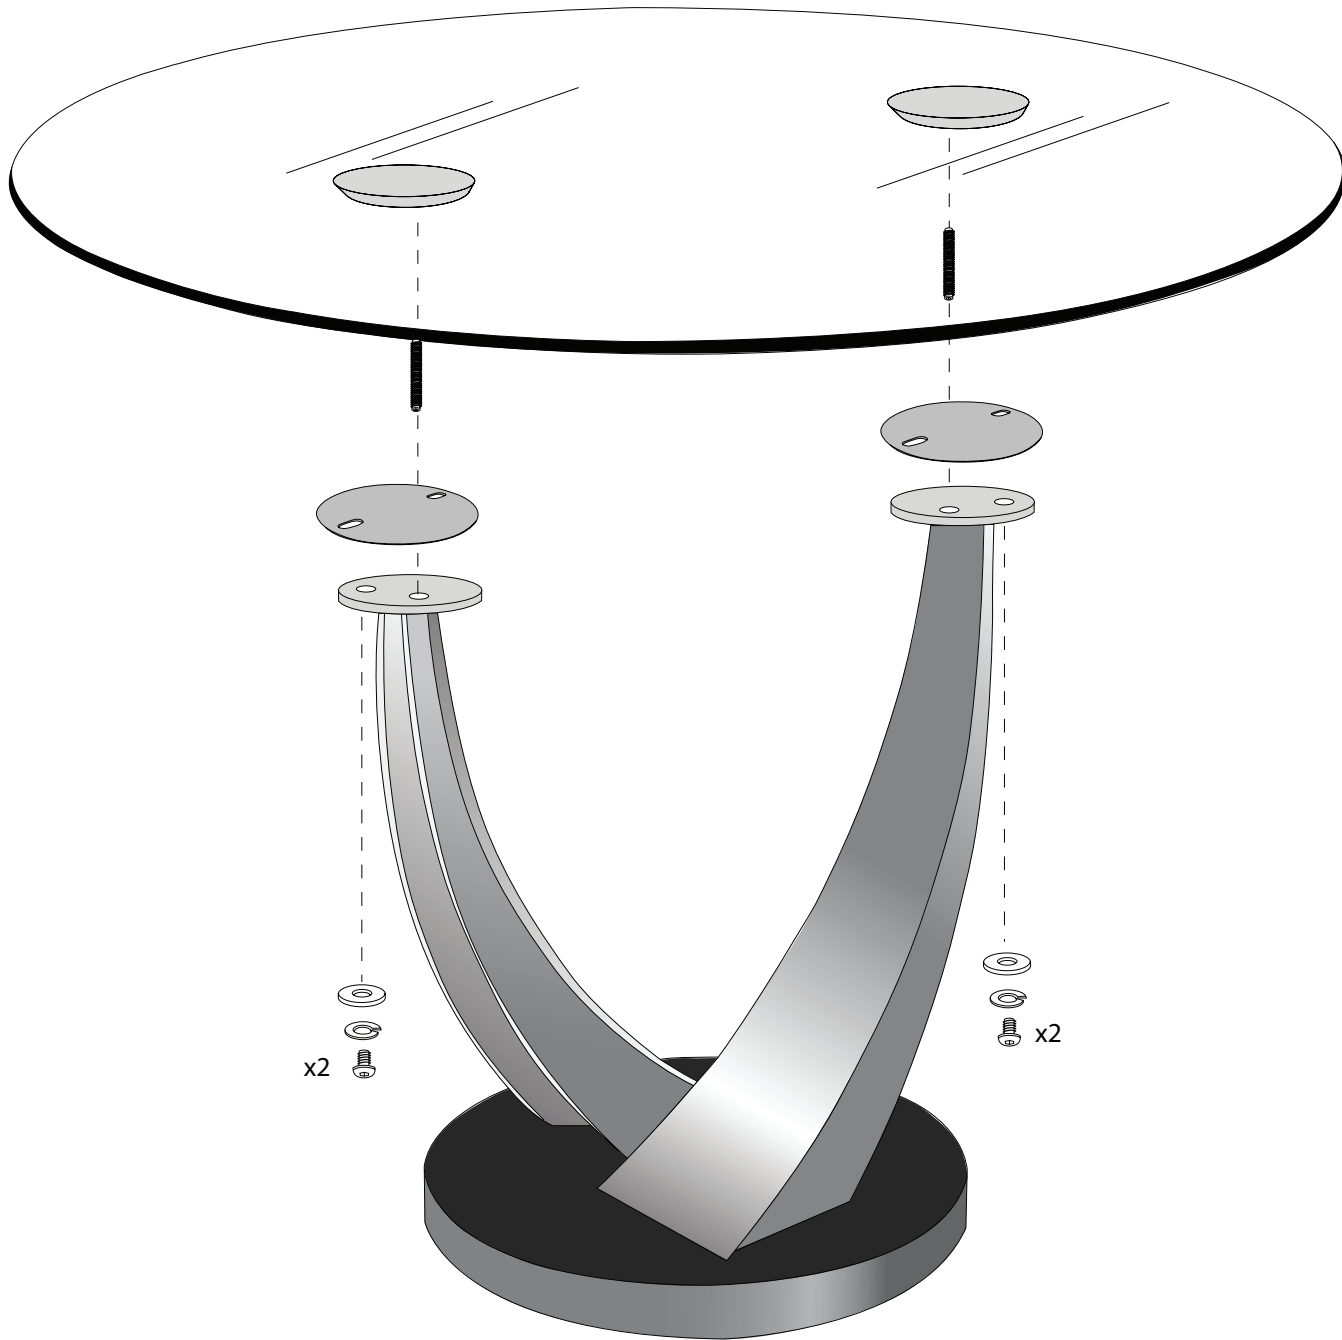

Position rubber spacers on base columns

Place both set screws in glass disc to help align the glass with the base.

Once glass is set, remove set screws and secure with allen bolts provided.

HAND TIGHTEN
DO NOT USE POWER TOOLS



MODERN
www.elitemodern.com