




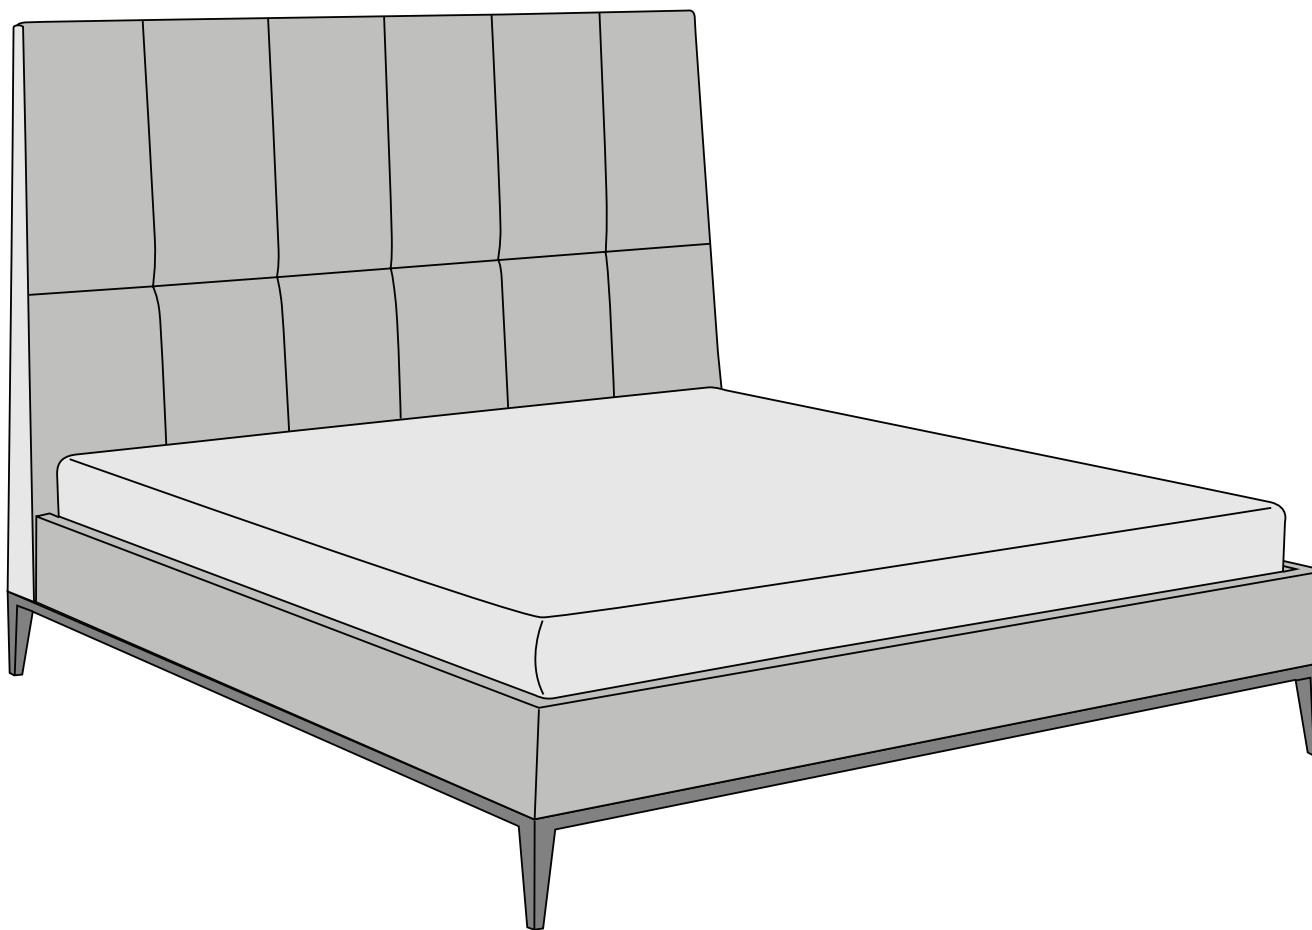

ALTA


9027Q Queen Bed
9027CK California King
9027EK Eastern King



Hardware

 Button Head Screw
x26


 Washer
x38

 Flathead Allen Screw
x12


 Button Head Screw
x4

 Lock Washer
x4


 Wood Screw
x4

 Small Allen Wrench
x2


 Large Allen Wrench
x1

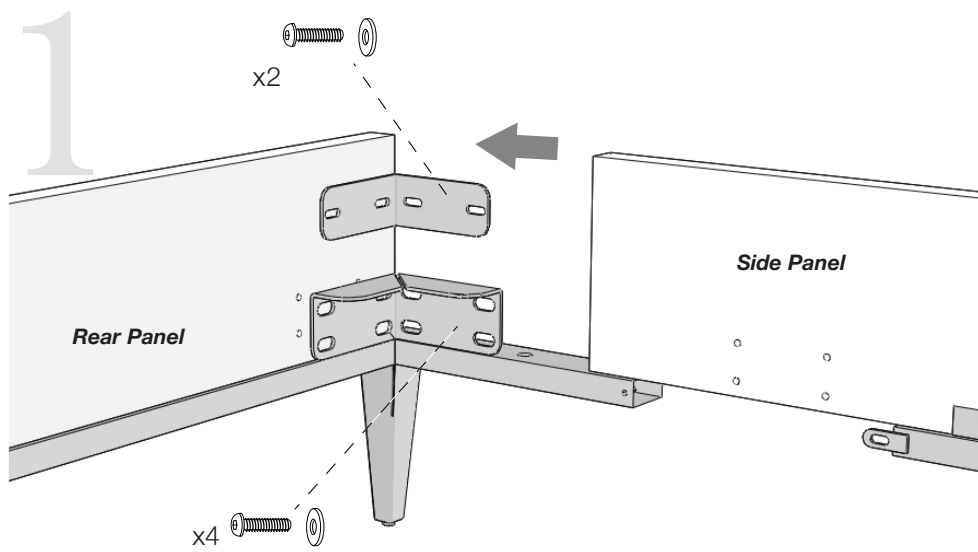


Align rear panel with side panel and secure as shown. Adjust as needed for tight fit.
Repeat on opposite side.

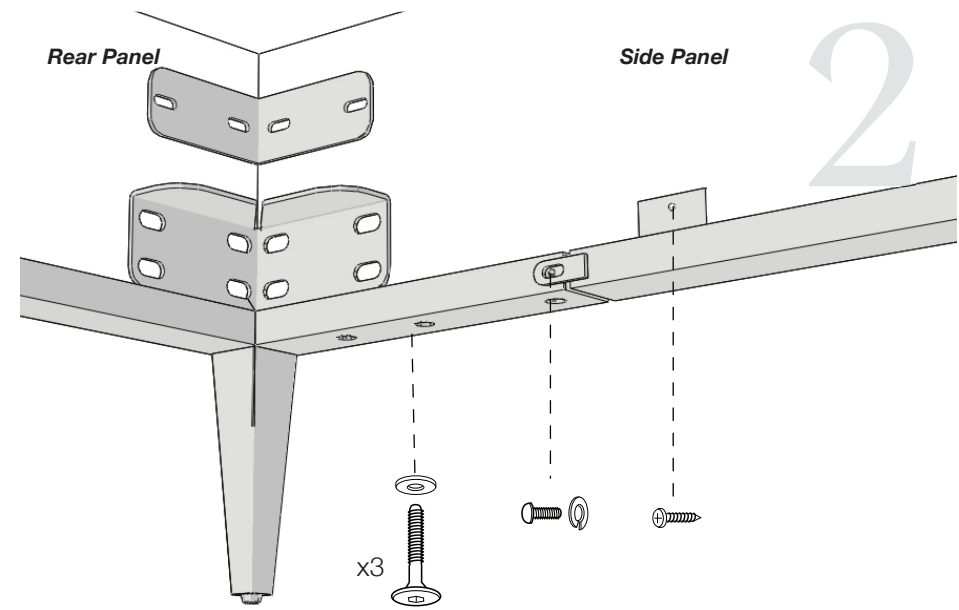

Before attaching to headboard, secure as shown. Repeat on opposite side.

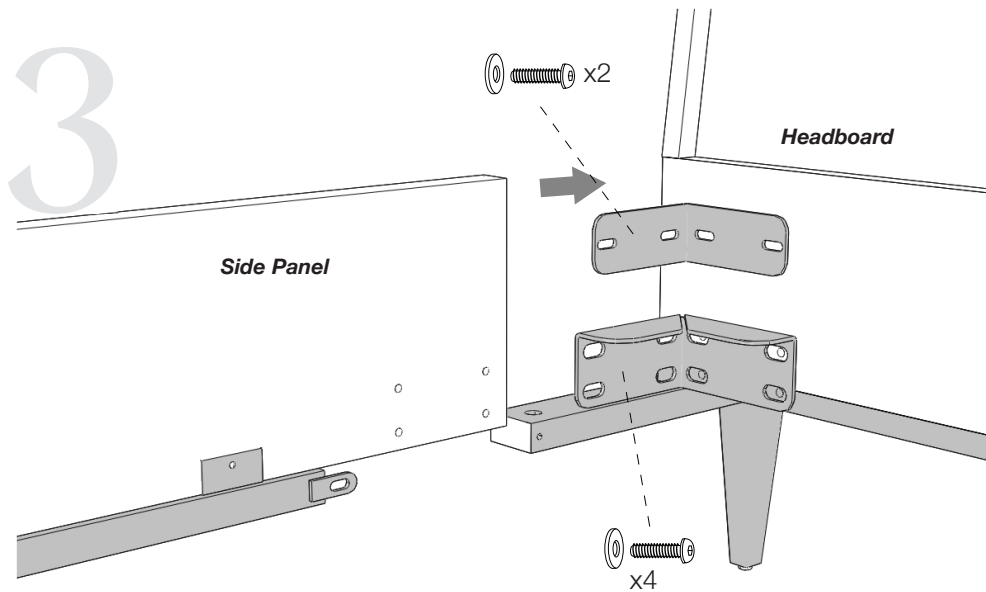

Align side panels with headboard and secure. Repeat on opposite side.

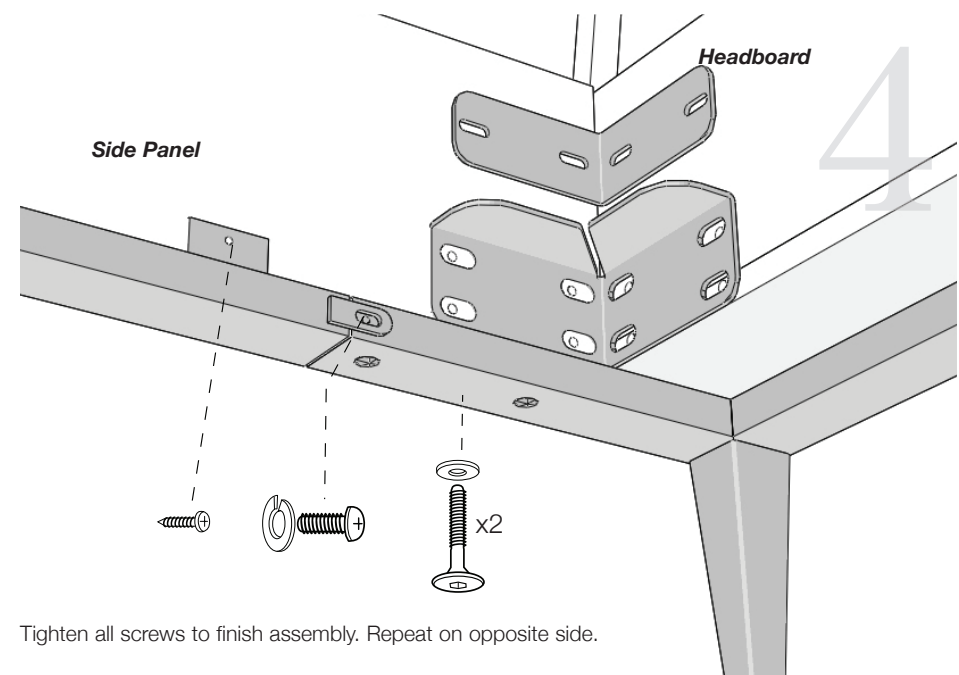

Tighten all screws to finish assembly. Repeat on opposite side.